



## SPECIFICATION ,

- Output RMS
- Input Impedance
- · Signal-to-Noise Ratio
- Frequency Response
- Function
- Power Input
- Dimension
  - ~Subwoofer
  - ~Satellite

 $4\Omega$ bass /  $4\Omega$ satellite

≥60dB

30Hz~20KHz

USB/SD card reader slot, with

wiremesh, side button with VOL/

Treble/Bass AC 220V~50 Hz

W210xH220xD235 mm W95xH135xD102 mm

## **WARNING**

Don't place the product in the high temperature. Moist and place the product on a secure, stable surface. The product can cause serious damage if it fall.

Never open the product by yourself. It is an electrical shock hazards.

If the repair is needed, It should be done by qualified electrician.

Take out all power cords immediately and do not use the product if damaged or water enter into the product with carelessness.

Do not maximize the volume when it is connected with the eqipment which has output power. It causes sound it dispropotion.

Use the product only in indoor.

Unplug the product only in indoor.

Unplug the power outlet, if you won't use more than two days.

































