
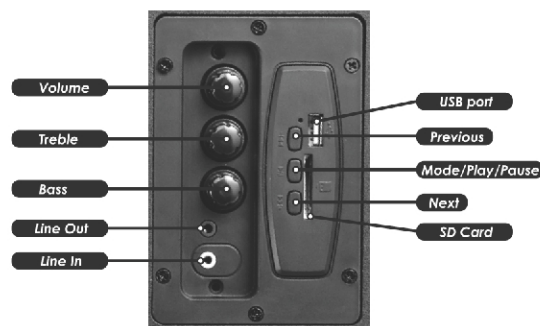


OPERATION STEP

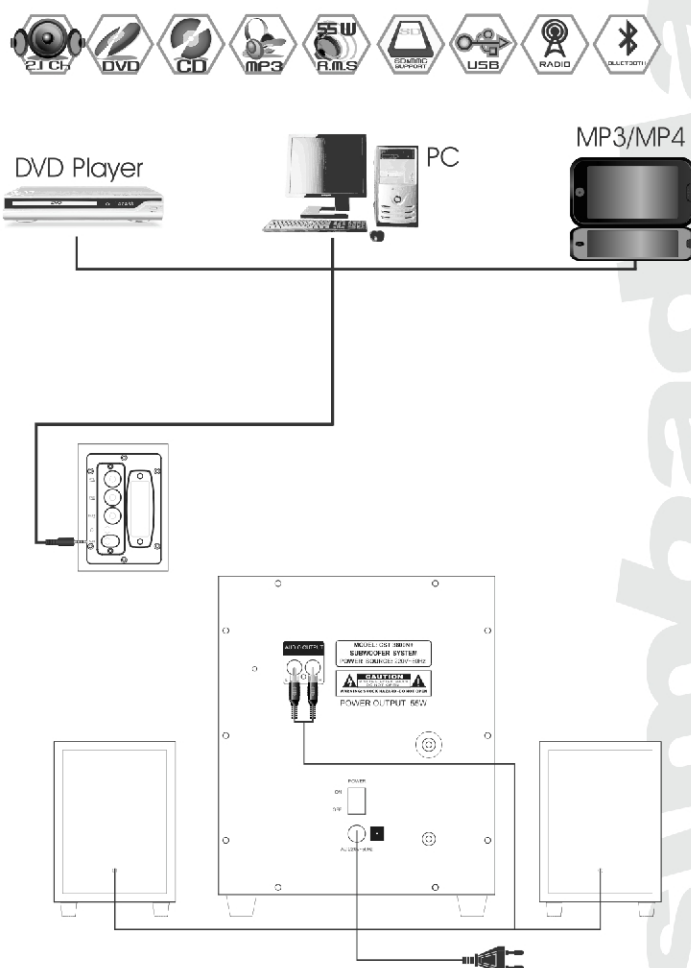

Press and hold ►|| button, the indicator light was blinked. Turn on your bluetooth device, search and choose "CST 3800N+" now your speaker has connected (the indicator light was blinked slowly).

If you want to connect with other device, please turn off your device bluetooth, press and hold ►|| and turn on your bluetooth other device, the indicator light will flash. Press ►|| once again and Indicator light of speaker was blink in the pairing mode.

In usb mode, use the flashdisk with FAT 32 format. This speaker only reading a FAT 32 format disk.

SPECIFICATION

R.M.S	: 55 watt
Driver	: 5.25" + 3"x2
S/N Ratio	: 65dB
Frequency Response	: 50Hz~20kHz
Impedance	: 4Ωbass/4Ωsatellite
Power	: 220V/50HZ
Cabinet Material	: Wood
Color	: Black
Dimension	
Subwoofer	: W230xH280xD296
Satellite	: W125xH180xD146

WARNING

Don't place the product in the high temperature. Moist and place the product on a secure, stable surface. The product can cause serious damage if it fall.

Never open the product by yourself. It is an electrical shock hazards.

If the repair is needed, It should be done by qualified electrician.

Take out all power cords immediately and do not use the product if damaged or water enter into the product with carelessness.

Do not maximize the volume when it is connected with the equipment which has output power. It causes sound it dispropotion.

Use the product only in indoor.

Unplug the product only in indoor.

Unplug the power outlet, if you won't use more than two days.



MANUAL BOOK

CST 3800N+



MUSIC PLAYER

 Bluetooth®



N
SERIES

simbadda
Active Multimedia Subwoofer System