
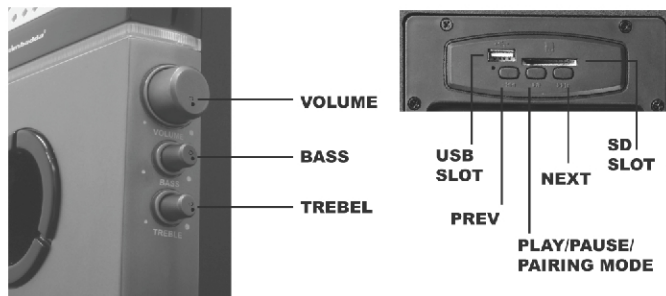


OPERATION STEP

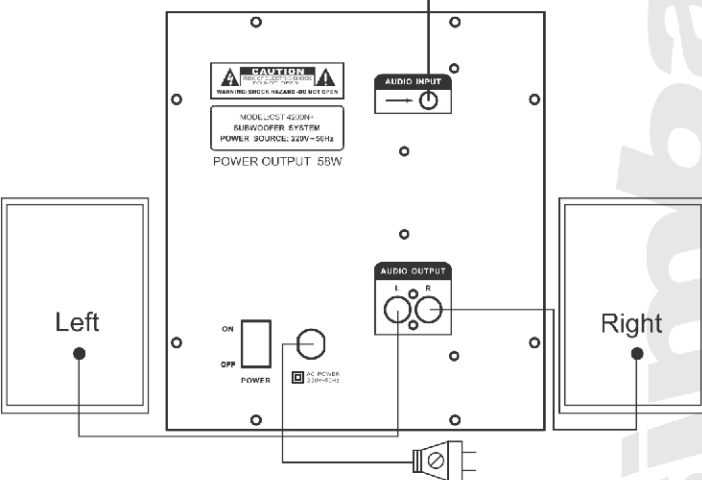

Press and hold **▶▶** button, the indicator light was blinked. Turn on your bluetooth device, search and choose "CST 4200 N+" now your speaker has connected (the indicator light was blinked slowly).

If you want to connect with other device, please turn off your device bluetooth, press and hold **▶▶** and turn on your bluetooth other device, the indicator light will flash. Press **▶▶** once again and Indicator light of speaker was blink in the pairing mode.

In usb mode, use the flashdisk with FAT 32 format. This speaker only reading a FAT 32 format disk.

SPECIFICATION

• Output RMS	58 W
• Input Impedance	47K Ohm
• Signal-to-Noise Ratio	≥ 75dB(A-weighted)
• Frequency Response	
~ Sub Woofer	20 Hz - 200 Hz
~ Satellite Speaker	100 Hz - 20 KHz
• Speaker Unit	
~ Woofer	5.25" / 8 Ohm
~ Satellite	3" / 6 Ohm
• Power Input	AC 220V~50 Hz
• Dimension	
~ Subwoofer	W190xH280xD290 mm
~ Satellite	W109xH179xD122.5 mm

WARNING

Don't place the product in the high temperature. Moist and place the product on a secure, stable surface. The product can cause serious damage if it fall.

Never open the product by yourself. It is an electrical shock hazards.

If the repair is needed, It should be done by qualified electrician.

Take out all power cords immediately and do not use the product if damaged or water enter into the product with carelessness.

Do not maximize the volume when it is connected with the equipment which has output power. It causes sound it dispropotion.

Use the product only in indoor.

Unplug the product only in indoor.

Unplug the power outlet, if you won't use more than two days.



MANUAL BOOK

CST 4200N+



MUSIC PLAYER



N
SERIES

simbadda
Active Multimedia Subwoofer System