 
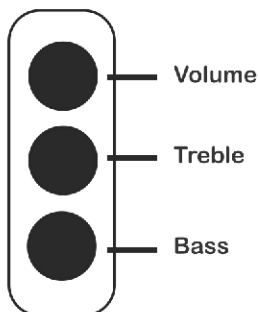 
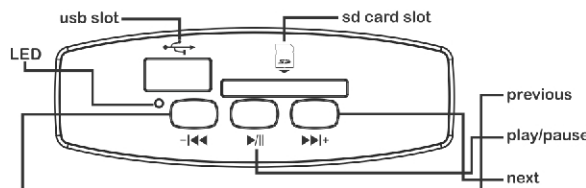 


## OPERATION STEP

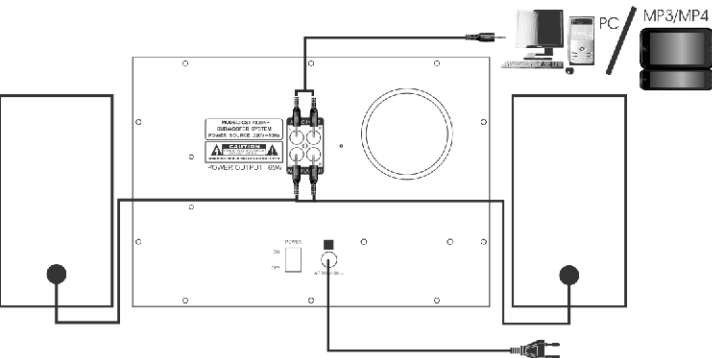

## SPECIFICATION

• R.M.S	: 65 watt
• Driver	: 5.25"X3"X2
• Impedance	: 4Ω bass/4Ω satellite
• S/N Ratio	: 65dB
• Frequency Response	: 30Hz~20kHz
• Function	: USB flash drive slot, play by SD card, subwoofer and satellite with wire decoration, twist switch on the side can control volume/treble/bass, Bluetooth connection
• Cabinet Material	: Wood
• Color	: Black
• Power	: 220V/50Hz
• Dimension :	
Subwoofer	: W320 X H230 X D342 (mm)
Satellite	: W100 X H200 X D141 (mm)

## BLUETOOTH MODE

Turn on the speaker, the red indicator will lights constant (it mean, the speaker on the standby mode). Press and hold ►|| button and the tone has ringing, red LED indicator will be flashing and bluetooth is activated. The device asking you to connect with the speakers bluetooth, choose "yes". If the Device is not responding, open your device bluetooth configuration, searching for "CST4800N" and then, choose yes. (if the device asking a password, entered "0000" as default password). If the device has been successfully conected with the speaker, the tone has ringing as a sign, and the red LED indicator has blink slowly.

To connecting bluetooth with other device, press ►|| button and the red indicator will be flash constantly. Make sure the bluetooth on your device has been disconnected (the tone has ringing as a sign the bluetooth speaker is disconnected) and then, press and hold ►|| button, and then the red LED indicator has blinking and the bluetooth is active. Active your bluetooth device, if the bluetooth will be successfully conected, the tone has ringing and red LED indicator blink slowly.

(When your on the bluetooth mode, if your input the USB, speaker has reading file song on the USB automatically).  
(When your input the SD card on the bluetooth mode, speaker has reading file song on the SD card automatically).

## USB & SD CARD MODE

Press the power button on the back of the speaker. When active, the LED lights turn on blue and indicator lights at the top will light constant (red LED) as a sign that the speakers are on standby mode (standby). Insert the USB, and the red indicator light flashes slowly. Make sure there are song files on the USB and the song will be played automatically.  
If you want to play song files via SD memory, insert SD memory to the space available, then the red indicator light flashes slowly and the speakers will automatically play songs from the SD memory.

(when you are in USB mode, and then you put on the SD memory slot available, the speaker will read files from an SD memory automatically, and if inserted SD memory first, and then you put the USB, the speakers will automatically read the song files from USB).

## WARNING

Don't place the product in the high temperature.  
Moist and place the product on a secure, stable surface.  
The product can cause serious damage if it fall.

Never open the product by yourself. It is an electrical shock hazards.  
If the repair is needed, It should be done by qualified electrician.

Take out all power cords immediately and do not use the product if damaged or water enter into the product with carelessness.

Do not maximize the volume when it is connected with the equipment which has output power. It causes sound it dispropotion.

Use the product only in indoor.

Unplug the product only in indoor.

Unplug the power outlet, if you won't use more than two days.



## MANUAL BOOK

# CST 4800N+

Active Multimedia Subwoofer System



## MUSIC PLAYER



**N**  
SERIES

**simbadda**