

Connect to audio from the cellphone/Pad/Computer/Notebook/DVD/CD etc.
 Plug one end of the audio cable into the speaker and the other end into a cellphone or other audio device.

FM Radio
 Press the **M** button to enter FM, the LED indicator light will flash blue slowly. Long press play/pause button to start channel auto searching, the bluetooth indicator will flash blue rapidly. Long press play/pause button again to pause searching, the bluetooth indicator will flash blue slowly. Press **M** button again to exit FM radio, the bluetooth indicator will flash blue rapidly and bluetooth is ready to pair. Under playing mode, short press : “play/pause” button to auto search the FM channel and store it automatically. Press previous or next button to change the stored FM channel connect to the USB charging cable will improve the FM receiving.

- WARNING**
- To prevent any risk of fire or electrical hazard, do not open or replacement any parts by yourself, if the product is damaged. Please contact qualified service personnel or designated repair center.
1. Water and Moisture the unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
 2. Object and Liquid Entry Care should be taken so that object do not fall and liquid are not spilled into any openings or vents located on the product.
 3. Heat the unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
 4. To place your product on a stable, level countertop.
 5. Do not put any other item on the product.
 6. When you press the buttons, to avoid force to damage the product.
 7. For your safety, please care to use and protect the USB cable.
 8. Cleaning the unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

MANUAL BOOK

(((CST 800N)))

MUSIC

▶

PLAYER

enjoy music anytime, everywhere!



simbadda

MUSIC

▶


PLAYER



CST 800N

● Specification

- R.M.S : 10Watt
- S/N Ratio : 70dB
- Battery : 5V / 1200mAh
- Speaker driver : 4Ω / 3"
- Frequency response: 120Hz-20KHz
- Dimension : W256 x H115 x D115 mm
- Function : FM Radio, Bluetooth, SD Card, USB, AUX-IN

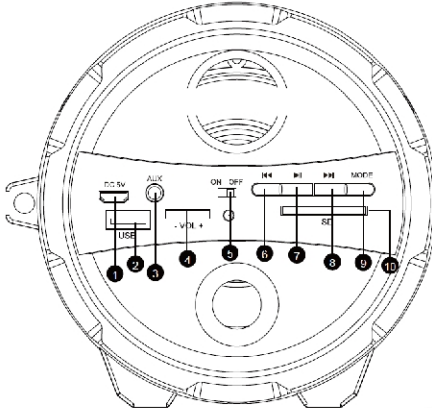

● Function

1. Charging Port (input DC 5V)
2. USB Port
3. AUX-IN jack
4. Volume Gear
5. Power ON/OFF Switch
6. Previous track
7. Play/Pause
8. Next track
9. Mode Button
(Switch among Bluetooth, USB, SD card, FM and AUX-IN mode)
10. SD card port

● Packing List

- 1 x Speaker
- 1 x USB charging cable
- 1 x Instruction manual
- 1 x strap

● Using The Speaker

- Charging**
 There are two ways to charge the speaker
1. Plug the charging cable into speaker and connect to another USB power source like PC/MAC, etc.
 2. Use the AC adapter to charge.
- Please turn off the speaker when charging.

- Connecting**
 Bluetooth connection
 Slide power key to ON position, the speaker bluetooth indicator will flash in blue search the bluetooth device on your cellphone, select “CST 800N” in the list bluetooth indicator will stop flashing after the speaker is linked to the cellphone.

- Features**
 USB, SD, AUX-IN, Bluetooth, rechargeable battery, Volume+/-, Play/Pause, Previous/Next track.