

- 3.AUX MODE Connect the 3.5mm audio cable with mobile or PC, it will play music through AUX mode.
- 4.FM MODE Connect the 3.5mm audio cable with the speaker, then press the “MODE” button change to FM mode, at this time, the 3.5mm audio cable can be used as Antenna.
- 5.When you connect a phone which is playing music, at this time there is a incoming Call, Short press the “call” button will answer the call, now long press the button -/◀◀▶▶/+, can control the volume, then short press the “call” button, the call is end.
- 6.BUTTON Short press ▶| for play/pause, Short press ▶▶|/+ for next track, long press for volume up. Short press -/◀◀ for previous track, long press for volume down.
- 7.Charge: Please connect the USB charge cable with computer or 5V adapter. When it is charging the light indicate red. The red light will off when charge full.

WARNING

To prevent any risk of fire or electrical hazard, do not open or replacement any parts by yourself, if the product is damaged. Please contact qualified service personnel or designated repair center.

- 1.Water and Moisture the unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- 2.Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- 3.Heat the unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4.To place your product on a stable, level countertop.
- 5.Do not put any other item on the product.
- 6.When you press the buttons, to avoid force to damage the product.
- 7.For your safety, please care to use and protect the USB cable.
- 8.Cleaning the unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

MANUAL BOOK

CST 806N
enjoy music anytime, everywhere!

MUSIC  PLAYER



FM Radio



Bluetooth



Micro SD





USB


simbadda

MUSIC  PLAYER

CST 806N
enjoy music anytime, everywhere!

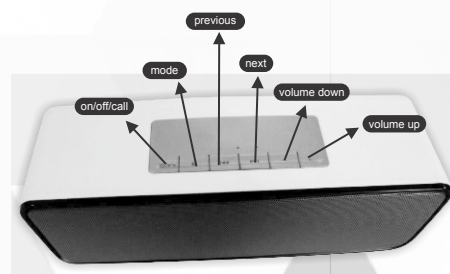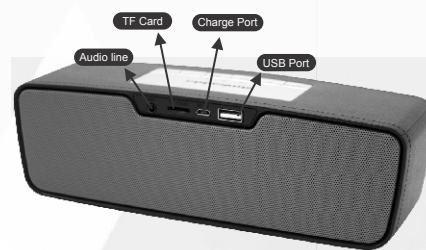

● Button Function

1.  mode : Press and hold the button for 2 second to power on.
- 2.Short press mode (M) to replace radio and music mode
- 3.◀◀ Previous track.
- 4.▶▶ next track.
- 5.Short press or hold the button (+) is volume up
- 6.Short press or hold the button (-) is volume down

● Using The Speaker

- 1.Turn on the power switch to the “ON” position at first, the bluetooth light glows, and the speaker will automatically enter into pairing mode. Now you can find the bluetooth name in your mobile phone or other bluetooth device. Then connect them is okay. You can play the music now.
- 2.TF MODE Insert the TF card directly, the speaker will change to TF card mode and play music automatically.

● Spesification

Battery : 3.7V Li-ion Battery 1500mAh
Speaker driver : 4Ω 3Watt x 2
Charging voltage : 5V 800mA
Frequency response : 60Hz-18KHz
S/N Ratio : 65db
R.M.S : 3Watt x 2
Dimension: L220 x W68 x H68mm



FM Radio



Bluetooth



Micro SD



USB

● Function

1. MICRO USB charge port (5V 800mA)
2. TF card port (supporting 32G)
3. Φ 3.5 mm audio Line –IN port
4. Mobile phone self timer
5. Button on/off/call
6. Button mode
7. Button previous
8. Button next
9. Button volume down
10. Button volume up