By pressing PREVIOUS/NEXT button on the front panel, you can select a specific song from the play list.

#### PAUSE/PLAY BUTTON

To stop playing the current track, please press PAUSE/PLAY button on the front panel. Press it once again to continue playing.

### **VOLUME ADJUSTMENT DIAL**

Twist the dial anti clockwise to decrease the volume and clockwise to increase the volume.

## **MIC IN JACK**

Plug in microphone directly for playing.

#### **USB JACK**

Insert USB card directly for playing

#### **LINE IN JACK**

- 1. Connect an audio cable (not included) to the LINE IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc, then select LINE by pressing the POWER/INPUT button on the front panel.
- 2. Play from an external audio device.

## **FM FUNCTION**

1.Press POWER/INPUT to select FM radio

2.Press PLAY/PAUSE button on front panel for automatic searching and saving the radio stations.

Press PREVIOUS/NEXT button to select a specific radio station.

## Bluetooth

Please press POWER/INPUT button on control panel to select bluetooth mode. Simultaneously open the bluetooth setting on your phone, tablet or any other bluetooth enabled audio device and select "CST 836N" (no need to match code), the unit and device will then connected via bluetooth. Press the "next song" and "previous song" button on the control panel to select the song, press "play/pause" button to control the playing status.

### **WARNING**

To prevent any risk of fire or electrical hazard, do not open or replacement any parts by yourself, if the product is damaged. Please contact qualified service personnel or designated repair center.

- Water and Moisture the unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- 3. Heat the unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4. To place your product on a stable, level countertop.
- 5. Do not put any other item on the product.
- 6. When you press the buttons, to avoid force to damage the product.
- 7. For your safety, please care to use and protect the USB cable.
- 8. Cleaning the unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.

# MANUAL BOOK CST 808N



enjoy music anytime, everywhere!











# simbadda

MUSIC PLAYER

simbadda

MUSIC PLAYER

simbadda

MUSIC PLAYER

simbadda



## Specification

**CST 808N** 

R.M.S : 25Watt S/N Ratio : 75dB

Battery : 9V / 1500mAh

Speaker driver :  $4\Omega / 8$ " Frequency response: 90Hz-16KHz

Dimension : W290 x H244 x D405 mm

Function : FM Radio, Bluetooth, USB, AUX-IN,

Digital Karaoke, LED Display









## Function

- 1. LED Display
- 2. Volume Adjustor
- 3. Power/Input

(Hold for 3 seconds to switch on/off the unit and mode selection for Bluetooth, FM Radio, Line Input, USB)

] 0 0

- 4. Light (Light mode selection & switch on/off button)
- 5. Repeat
- 6. Mic Input
- 7. Line Input
- 8. USB Port
- 9. Charging IndicatorRED Light = ChargingGREEN Light = Full Charged
- 10. DC interface (9V)
- 11. Next track
- 12. Play/Pause
  - (In FM mode, hold for 3 seconds the device will enter into automatic scan)
- 13. Previous track

# Using The Speaker

## **POWER SOURCE**

- 1. Please charge the unit at least 4 hours before first time using.
- 2. Long press the POWER/INPUT button on the panel to switch on or off the speaker.

## **CHARGE THE BATTERY**

When the battery is charging, the CHARGE STATUS lights red. After the battery has fully charged, the light turns to be green.

- 1. Connect the AC adaptor to the DC IN JACK of the speaker firmly, and plug it into a wall outlet.
- 2. When the battery is fully charged, first disconnect the AC adaptor from the speaker, then from the wall outlet.
- 3. The speaker works normally when charging.

## POWER/INPUT BUTTON

Press POWER/INPUT button on the front panel to select the mode (LINE, USB, Bluetooth or FM).

# REPEAT FUNCTION

- 1. During playing status, press REPEAT button on the front panel once to repeat playing the current track. To cancel the repeat option, press the REPEAT button again.
- 2. REPEAT function only available for USB card playing modes (not for Bluetooth/Line/FM).

## **RECORDER FUNCTION**

Recording: Insert USB card, plug in microphone, long press REPEAT button on the front panel, then the machine displays "rEC" to start recording, short press the REPEAT button to stop recording and play the recording automatically, press POWER/INPUT to return to USB card playing state. Play the recording: Insert USB card, long press >> to play the recording file and press | << or >> button to select recording file.