

- Remove the waterproof plug, you can use the U disk, AUX, Micro SD card player and charging the battery.
- At the same time preset USB, Micro SD Card, AUX, Bluetooth connection, press the switch button in the playback mode in turn play (when switching to Bluetooth mode, Bluetooth will automatically connect function on the mobile phone without the need to manually connect)

- WARNING**
- To prevent any risk of fire or electrical hazard, do not open or replacement any parts by yourself, if the product is damaged. Please contact qualified service personnel or designated repair center.
- Water and Moisture the unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
 - Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
 - Heat the unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
 - To place your product on a stable, level counter top.
 - Do not put any other item on the product.
 - When you press the buttons, to avoid force to damage the product.
 - For your safety, please care to use and protect the USB cable.
 - Cleaning the unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
 - Can not be a long time to charge the battery (charging time can not be more than 6 hours, the red light off to unplug the power).
 - After use, clean the machine and put it back in the original packing box.

MANUAL BOOK

CST 906N

MUSIC  PLAYER

enjoy music anytime, everywhere!



Figure :



Radio



Bluetooth



Micro SD



USB

simbadda



- Spesification**
- Battery: 7.4V / 4000mAh
- Speaker driver: 8Ω 10Watt x 2 + 8Ω 25Watt
- Charging voltage: 5V 1.3A
- Frequency response: 60Hz-18KHz
- S/N Ratio: 65db
- R.M.S: 45Watt
- Dimension: L280 x W110 x H110mm



- Function**
- Button Looping
- Button Play/pause/call
- Button Next/volume up
- Button Previous/volume down
- Button on/off

- Button Function**
 - on/off : Press and hold the button for 3 second to power on/off.
 - Short press (🔁) to looping song.
 - ▶▶/- Previous track and volume down.
 - ◀◀/+ Next track and volume up.
 - ⏸/⏮ Play/pause track and call.
- Using The Speaker**
 - Please take the machine out of the box and make sure the machine is intact.
 - Long press the power button for 3 seconds. Turn on the power to enter the Bluetooth pairing mode, pairing success can play music and call.
 - Press the 🎵 button, Short press for a previous song, long press volume down, Press the 🎵 button, Short press for a next song, long press volume up, Short press the 🎵 button play and pause the song, or the phone can be the last call back directly, you can also answer the phone call and hang up the phone. Press this 🔁 button, you can play back.