




5. Power button: Shutdown state, short press before the long press, the machine in the boot, boot state, short press switch mode, long press shutdown.
6. : Shutdown state, short press set the clock, press the alarm clock or set the alarm clock, Boot play state, press the button to play and pause, double-click the Bluetooth connection to call and hang up the phone.
7. : Play state, short press for next song, long press the volume down, the shutdown state, set the alarm clock time value.
8. : Play state, short press for last song, long press the volume up. Shutdown state, set the alarm clock time value.
9. Digital tube display function: Shutdown alarm clock mode, the digital display will show the time has been set. When playing the digital display will show the length of time to play the song.
10. Battery charging instructions (indicator lamp is located at the charging interface): when charging the red light is bright, full of red light off

WARNING

To prevent any risk of fire or electrical hazard, do not open or replacement any parts by yourself, if the product is damaged. Please contact qualified service personnel or designated repair center.

1. Water and Moisture the unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Objects and Liquid Entry Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
3. Heat the unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. To place your product on a stable, level countertop.
5. Do not put any other item on the product.
6. When you press the buttons, to avoid force to damage the product.
7. For your safety, please care to use and protect the USB cable.
8. Cleaning the unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
9. Charging note: the battery is a lithium battery, the charging current is 500MAH, the power supply is DC 5V, the power supply current can not be greater than 1000MAH.
10. Can not be a long time to charge the battery (charging time can not be more than 6 hours, the red light off to unplug the power).
11. After use, clean the machine and put it back in the original packing box

CST 908N

MUSIC PLAYER

enjoy music anytime, everywhere!

Radio



Bluetooth



Micro SD



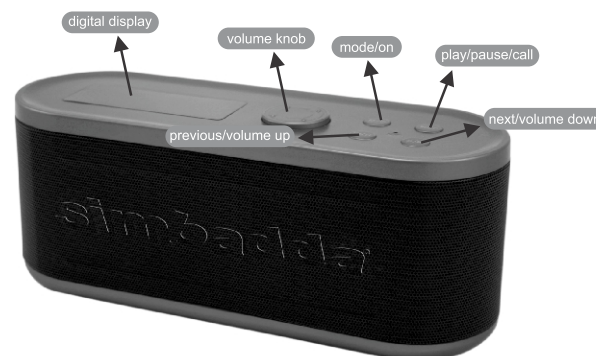 
USB



 
 


 
Digital Watch

simbadda


MUSIC PLAYER

**CST 908N***enjoy music anytime, everywhere!*

● Button Function

1.  mode : Press and hold the button for 2 second to power on/o.
2. Short press mode (**M**) to replace radio, bluetooth and music mode.
3. /- Previous track and volume up.
4. /+ Next track and volume down.
5.  Play or pause track.
6.  Button phone call/reject.

● Using The Speaker

1. Boot up the clock: press the  button to enter the clock mode, the power on the machine.
2. Long press the start button, the boot is to enter the Bluetooth mode, ready to match, the pairing can be successful Bluetooth playback and call functions.
3. In the boot state, press the power button to switch between USB, Micro SD, Bluetooth and other modes.
4. Volume knob: Turn the volume knob clockwise to increase the volume, counter clockwise to reduce volume. When the alarm clock mode, short press the knob, can automatically alarm again ten minutes later, and then click again and so on short delayed ten minutes, don't press this knob, only ring a bell.

● Specification

Battery: 3.7V / 3000mAh
Speaker driver: 4Ω 5Watt x 2
Charging voltage: 5V 1A
Frequency response: 90Hz-18KHz
S/N Ratio: 78db
R.M.S: 5Watt x 2
Dimension: L220 x W80 x H85mm



Radio



Bluetooth



Micro SD



USB



Digital Watch

● Function

1. MICRO USB charge port (5V 1A)
2. Micro SD port (support 32G)
3. Φ 3.5 mm audio Line -IN port
4. Mobile phone self timer
5. Button on/off/call
6. Button mode
7. Button previous
8. Button next
9. Button volume down
10. Button volume up